

1. Remove the Healing Collar from the implant using the 1.25mmD (0.050") Hex Tool.




2. Seat the *Hex-Lock* Short Abutment onto the implant. Tighten the screw to 30 Ncm with a calibrated prosthetic torque wrench. Verify with x-rays that the abutment is fully seated.




3. Place the Short Impression Cap over the abutment. Snap the cap into place. If modifications to the abutment are needed, the impression cap should not be used.



4. Syringe impression material around the impression cap and record a full-arch impression. The cap will be picked up in the impression.

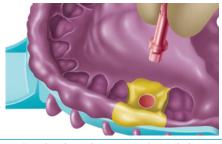

5. Align the Short Abutment Analog with the impression cap, using the flat on the analog to align with the flat on the inside of the impression cap. Insert the analog into the impression and snap into the impression cap.

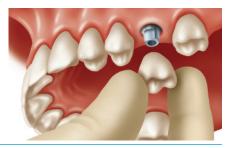


6. Prepare the provisional crown by applying acrylic to the Short Provisional Coping or use the coping alone. Block out the screw channel and cement the crown or cap in place using provisional cement.




7. In the laboratory, pour the model in die stone using soft tissue material to represent gingival contours.



8. Place the Short Waxing Coping on the abutment analog in the master cast. Use the flat on the analog to align with the flat on the coping.

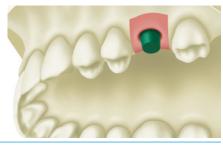

9. Seal the margins of the Short Waxing Coping. Wax and cast the coping using traditional prosthodontic techniques.

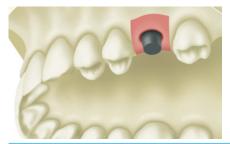

10. Apply porcelain to the casting to complete restoration.



11. Remove the provisional crown. Clean off any remaining cement. Block out the screw channel. Cement the final crown.



12. Completed restoration in place.



Refer to the *Hex-Lock* Short Abutment and Restorative System Instructions for Use (#8903 and #8904) for complete instructions on these products.



Hex-Lock Short Abutments			
	Implant Platform	EP*	Cuff Height
SA341	3.5mmD	4.5mmD	1mm
SA342	3.5mmD	4.5mmD	2mm
SA451	4.5mmD	5.5mmD	1mm
SA452	4.5mmD	5.5mmD	2mm
SA561	5.7mmD	6.5mmD	1mm
SA562	5.7mmD	6.5mmD	2mm
	SA341 SA342 SA451 SA452 SA561	Implant Platform SA341 3.5mmD SA342 3.5mmD SA452 4.5mmD SA561 5.7mmD	

*Emergence Profile

Qty.	Short Healing Caps	
		Emergence Profile
	SAHEAL4	4.5mmD
	SAHEAL5	5.5mmD
	SAHEAL6	6.5mmD

Qty.	Short Restorative Kits		
		Emergence Profile	
	SAKIT4	4.5mmD	
	SAKIT5	5.5mmD	
	SAKIT6	6.5mmD	

Color-Coding for Short Impression Caps and Short Abutment Analogs

Color **Emergence** Profile

🔶 Tan	4.5mmD
🔶 Rose	5.5mmD
+ Yellow	6.5mmD

Note: Match restorative components to the emergence profile of the abutment. For a complete list of products and tooling, please refer to the current product catalog.

Customer Account _____

Ordered By _____

2-Day Overnight (5:30 pm) P1 (10:30 am) Ship To: Dr. Name _____ Phone (_____) _____ Must Arrive By ____ **Payment Options** Address ____ Invoice 🗌 Visa City ____ State _____ Zip _____ Credit Card # ____ Order Date ____ Exp. Date ____ Signature ____

T	Qty.	Short Impression Caps	
			Emergence Profile
		SAIMP4	4.5mmD
		SAIMP5	5.5mmD
		SAIMP6	6.5mmD

F	Qty.	Short Provisional Copings	
			Emergence Profile
		SAPROV4	4.5mmD
		SAPROV5	5.5mmD
		SAPROV6	6.5mmD

Short Waxing Copings	
	Emergence Profile
NAX4	4.5mmD
NAX5	5.5mmD
NAX6	6.5mmD
	NAX4 NAX5 NAX6

I	Qty.	Short Abutment Analogs	
ſ			Emergence Profile
		SAANA4	4.5mmD
-		SAANA5	5.5mmD
5		SAANA6	6.5mmD



For questions or to fax orders:

In the U.S. 1 (800) 854-7019 Fax 1 (888) 225-2483

Outside the U.S. +1 (760) 929-4300 Fax +1 (760) 431-7811

Australia +61 (0)2 9950 5434 Fax +61 (0)2 9975 3594

Canada +1 (905) 567-2073 or 1 (800) 265-0968 Fax +1 (905) 567-2076

France +33 (0)1 45 12 35 35 Fax +33 (0)1 45 60 04 88

Germany +49 (0)761 1 56 470 Fax +49 (0)761 1 56 47 490 Israel +972 (0)3 6124242

Fax +972 (0)3 6124243 Italy +39 043 855 5573

Fax +39 043 855 3181

Spain +34 93 846 05 43 Fax +34 93 845 43 25

www.zimmerdental.com



Ship Via Federal Express

□ Mastercard

🗆 AmEx